



ergonomic products
Performance Without Compromise™

Assembly & Installation Guide

C3: Ergonomic Products 30" Computer Storage Cabinet®
For use with Computer Storage Cabinets





QUESTIONS? Contact Customer Service At: 1-866-ERGO-4-US

For answers to your technical questions.

In the event you need to use our voice mail system, a technical service representative will return your call promptly.

INTRODUCTION

In this manual you will find complete installation instructions for your new Ergonomic Products 30” Computer Storage Cabinet®. There are four (4) major sections:

1. Receiving your 30” Computer Storage Cabinet®
2. Tools needed for installation
3. Preparation for installation
4. Installation

SECTION 1 - RECEIVING YOUR 30” COMPUTER STORAGE CABINET®

Before starting to assemble your 30” Computer Storage Cabinet®, carefully follow the instructions in the following subsections. Doing this will facilitate the actual assembly process.

Shipping Configuration

Your products have been carefully packaged at the factory for safe shipment. Inspect the shipping cartons immediately for evidence of in transit damage. If you see any indication of external damage, call us at the toll-free number listed above. This will simplify making a claim against the shipping company.

Unpacking

Open each shipping carton and carefully remove the contents. Remove all packaging material from the contents of the shipping cartons. Arrange the contents on a bench or table in preparation for the inspection described in the next section.

Inspection

After unpacking your 30” Computer Storage Cabinet®, carefully check that the configuration/options for your product(s) are correct. If anything is damaged or missing, contact Products customer service at **1-866-ERGO-4-US**.

We make every effort to ensure that shipments are complete. However, if anything is damaged or missing, please call us immediately and we will send the item(s) out to you promptly.




SECTION 2: TOOLS NEEDED FOR INSTALLATION

Description	Purpose
Utility knife	For box and packing removal
Long Philips head screwdriver	For use only with tilt bin option
Electric drill and Assorted drill bits	
Countersink drill bit	
Six (6) #10 x 2 1/2" flathead screws	We recommend use of square drive screws

SECTION 3 - PREPARATION FOR INSTALLATION

Unit Dimensions for C3

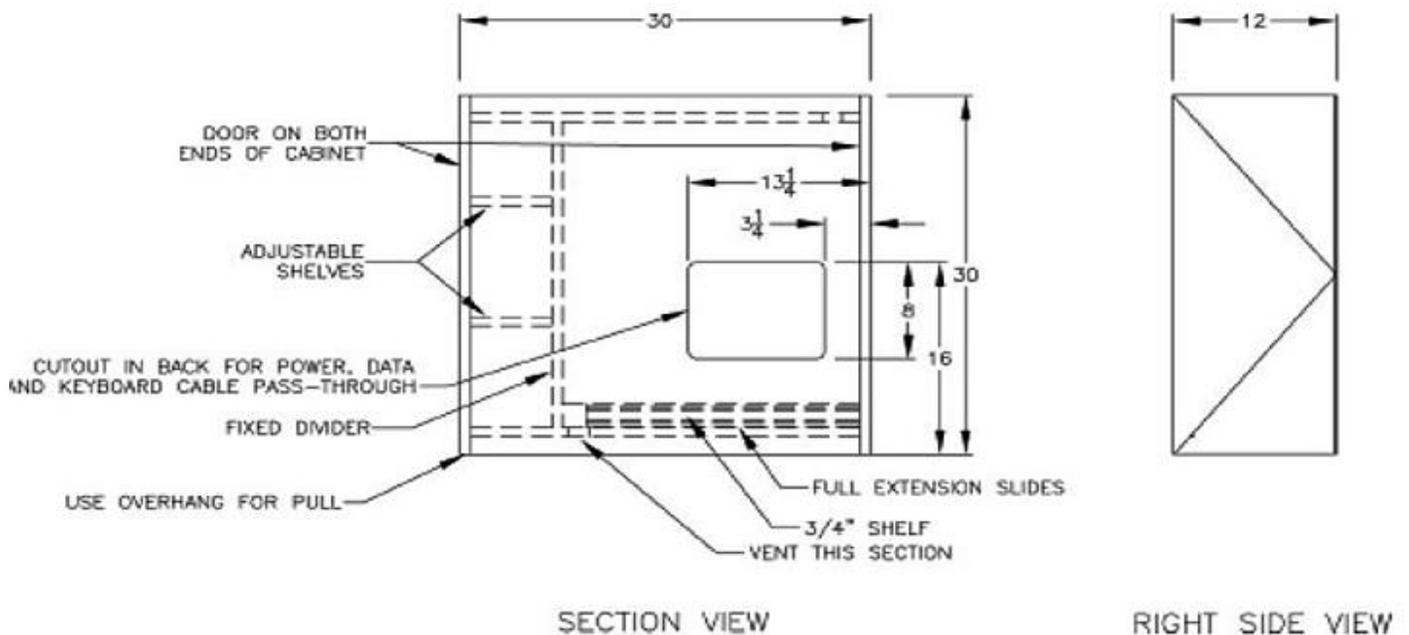




Wall Construction

Verify that blocking has been provided.

NOTE: Appropriate blocking is mandatory. Serious injury may result from improper installation.

Ergonomic Products shall not be responsible for damages that may occur if cabinet is not installed according to these instructions.

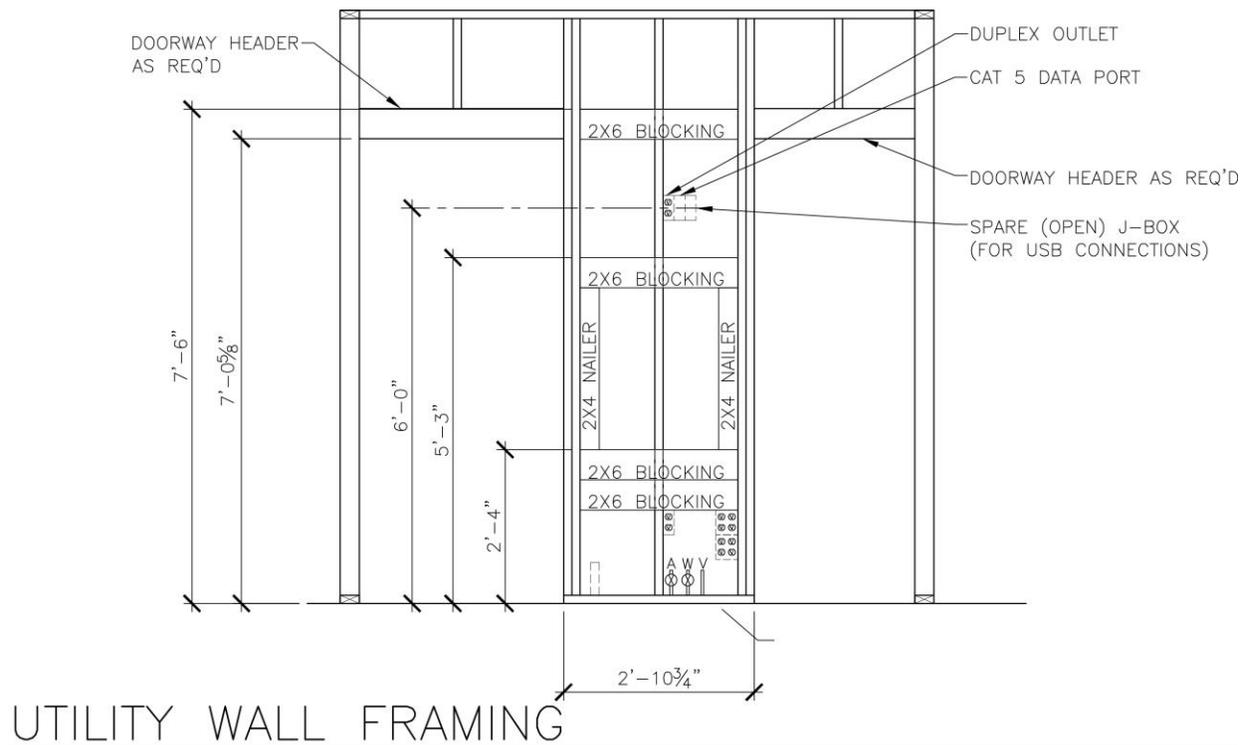



Blocking

During the framing process, a 2" x 6" or equivalent cabinet blocking should be installed at 55" above the finished floor and again 24" above the first blocking as shown in figure 1. This will provide necessary support of your Computer Storage Cabinet.

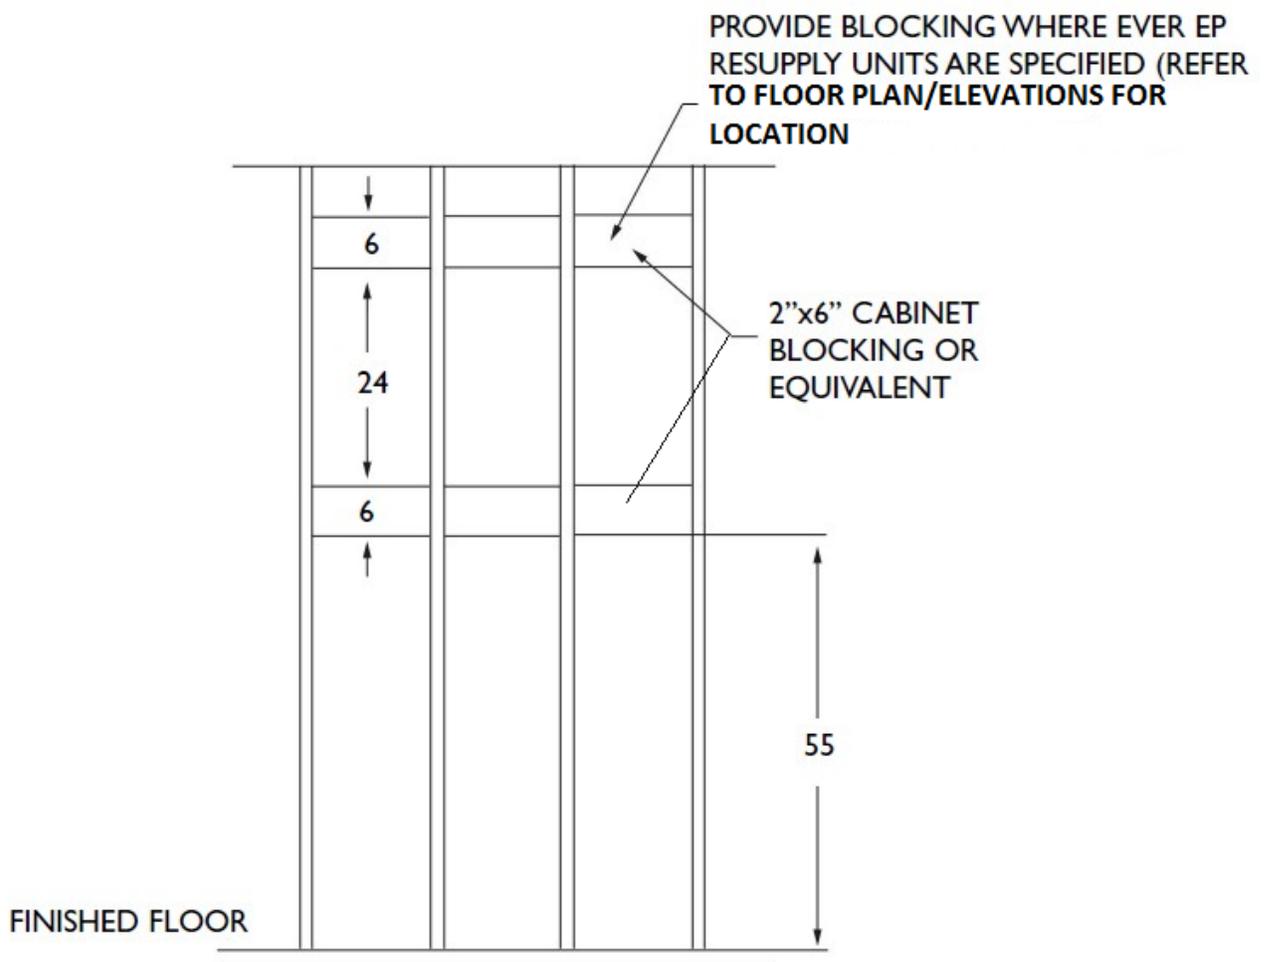


fig. 1




SECTION 4 – INSTALLATION

Installation of your 30" Computer Storage Cabinet® requires only standard tools. This section includes illustrations to help you visualize the installation.

Installation of C3 Computer Storage Cabinet®

1. Position the bottom of the Computer Storage Cabinet 60" above the finished floor, where indicated in below elevation detail (see figure 1).
2. Make sure unit is level.
3. Secure the Computer Storage Cabinet® using the six (6) #10 x 2 1/2" screws through top and bottom overhand. If desired, additional screws may be placed inside the cabinet to provide additional support or to reach blocking.

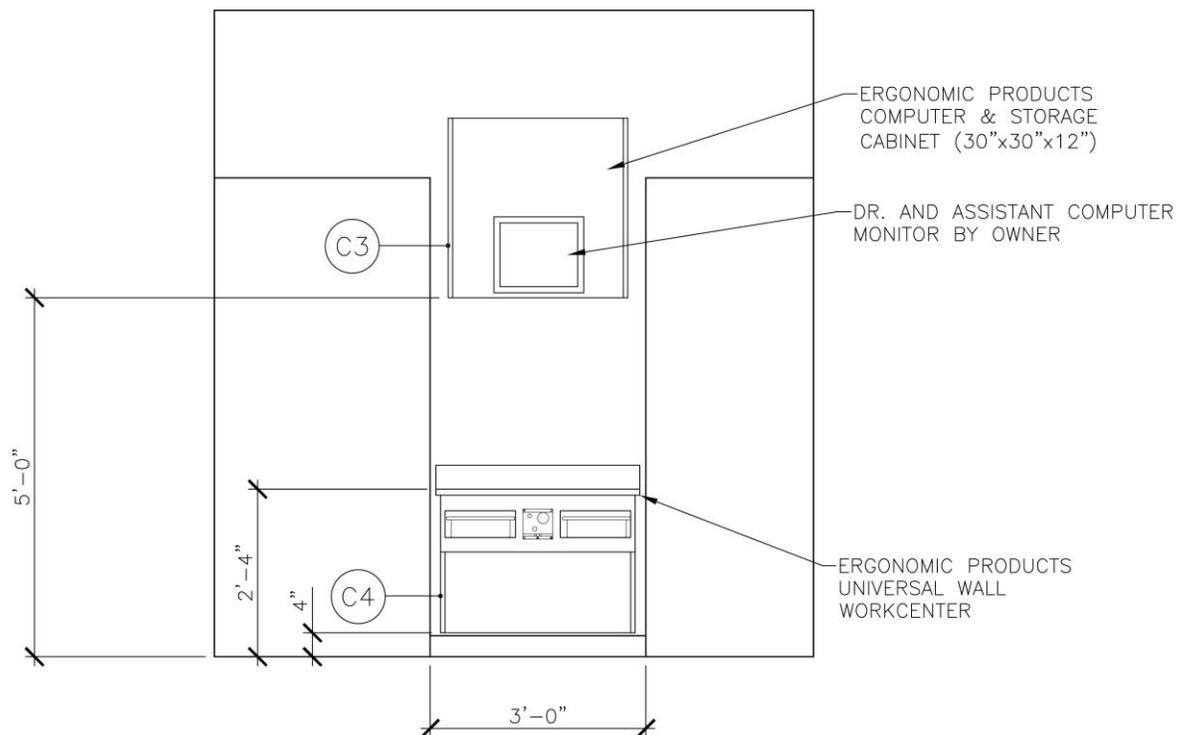

UTILITY WALL ELEVATION